

# SEIKI

## EVERYDAY TOASTER

SC2STW



# INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

---

General Safety	4
Product Overview	9
Installation	10
Operation	11
Cleaning & Maintenance	12
Specifications	12
Customer Helpline	Last Page

---

# GENERAL SAFETY

## IMPORTANT INFORMATION

Read this manual thoroughly before you start using the product.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 <b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>		The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.
This unit must be serviced by a qualified service personnel only.		The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

## IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

# GENERAL SAFETY (Cont.)

- This appliance is intended for private household use only. It is not intended for commercial/industrial or trade use. Do not use it outdoors.
- Do not use this toaster for anything other than its intended purpose, and only use it as described in this manual. Do not use the kettle to boil anything other than water. Any other use is not recommended and may cause fire, electric shock or injury.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- When using the toaster, it must be on a stable, secure, dry and level surface, out of children's reach, to prevent damage or injury.
- DO NOT operate the toaster under the following conditions:
  - \* In a damp place or in areas with high humidity (such as in a bathroom)
  - \* On or near a hot cooktop, in a heated oven, or near an open flame.
  - \* On a metal tray.
  - \* In confined spaces or under overhanging furniture/structures.
- The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.
- **WARNING:** Do not put anything else (such as oversized food, metal foil packages or utensils) into the toasting slots. Doing so may create a fire or electric shock hazard.
- **Crumb tray:** To avoid the risk of fire, remove crumbs from the crumb tray after each use. Pull the crumb tray out completely, discard the crumbs and wipe it clean with a dry or damp cloth. Make sure the tray is dry and properly in place before reuse.

## GENERAL SAFETY (Cont.)

- Do not leave the toaster unattended when the power is turned on.
- Ensure the toaster is switched off before removing it from the base.  
Do not move the appliance while it is switched on.
- Always unplug the toaster from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the toaster and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

### CAUTION: HOT!

- Do not touch any part of the toaster housing when it is in use. The surfaces get hot. Only touch the handle. Do not put any part of your hand or body near the toaster when it is turned on.
- Take care when handling the toaster after use.
- **WARNING:** Do not place your hand inside the toaster while in use.  
Wait for the toaster to complete toast, and push up the bread for it to then be easily removed.
- The toaster heats up and can cause burns. The temperature of accessible surfaces, especially the toaster's metal parts, can become very hot when the appliance is operating. Do not touch hot surfaces during or immediately after use. Use handles or knobs.
- Always use oven mitts when handling hot material and allow metal parts to cool before cleaning.
- Take care when taking out hot bread slices after toasting to avoid injuries.
- The product are not intended to be operated by means of an external timer or separate remote-control system.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.

## GENERAL SAFETY (Cont.)

- Do not leave the toaster unattended when the power is turned on.
- Ensure the toaster is switched off before removing it from the base.  
Do not move the appliance while it is switched on.
- Always unplug the toaster from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the toaster and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

# GENERAL SAFETY (Cont.)

## **ELECTRICAL SAFETY AND POWER CORD HANDLING**

- Before connecting the toaster to the power supply, make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the toaster.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the toaster itself in water or other liquid. Do not expose the electrical connections to water.
- Only use the toaster with the power base provided. Do not use the power base to power any appliance other than this kettle.
- Avoid spillage on the connector.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. Do not let it touch hot surfaces. The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently.
- Do not use an extension cord with this toaster.
- Do not pick up or operate the appliance if the power supply cord, plug, power base or toaster housing is damaged, or after it malfunctions or has been damaged in any manner.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. In case of damage, contact our after sales support centre for advice.

This appliances is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

The appliance must not be immersed.

**CAUTION:** Do not operate the toaster on an inclined plane.

# PRODUCT OVERVIEW



# INSTALLATION

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

## UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. This product has been packaged to protect itself against transportation.
- Be sure to remove all packaging materials around the appliance and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

## CAUTION

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press Cancel button to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice
6. In order to achieve uniform color we recommend that you should wait minimum 30s between each toasting so that color control can reset automatically.

# OPERATION

## USING YOUR TOASTER

1. Put bread slice into the bread slot which can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.

**NOTE:** Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is **7-position level**, the lowest is white and the highest is puce. The bread slice can be toasted to golden color at the position of “**4**”.

**Note:**

- 1) Toasting color for one side is darker than that for double bread at the same level.
  - 2) If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.
4. Press carriage handle down vertically until it is positioned in place, the indicator of Cancel will be illuminated, and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will be automatically sprung up, and you can remove the bread readily.

**Note:** The carriage handle can only be latched when the appliance connects to the power supply.

5. During the toasted process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the Cancel button at any time.
6. If the bread has been taken out from refrigerator. Set color control knob to your desired color. Press carriage handle down vertically until it is positioned in place, then press **DEFROST** button and the indicator of **DEFROST** will be illuminated. In this mode it will be toasted to your desired color.
7. If you want to reheat the cold toasted bread. Press carriage handle down vertically until it is positioned in place, then press **REHEAT** button and the indicator of **REHEAT** will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.

# CLEANING & MAINTENANCE

1. Before cleaning, unplug from the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

## SPECIFICATIONS

<b>Rating</b>	220-240V - 50-60Hz, 750W
<b>Dimensions</b>	290 (W) × 146 (D) × 160 (H) mm

# SEIKI

**SUPPORT:** [info@ayonz.com](mailto:info@ayonz.com)

**DISTRIBUTOR:** Ayonz Pty Ltd