

SEIKI

EVERYDAY KETTLE

SC17RW



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	9
Installation	10
Operation	11
Cleaning & Maintenance	12
Specifications	12
Customer Helpline	Last Page

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the product.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

GENERAL SAFETY (Cont.)

- This appliance is intended for private household use only.
It is not intended for commercial/industrial or trade use. Do not use it outdoors.
- Do not use this kettle for anything other than its intended purpose, and only use it as described in this manual. Do not use the kettle to boil anything other than water. Any other use is not recommended and may cause fire, electric shock or injury.
- Do not use the kettle without water in it to avoid damaging the heat elements. The elements must be completely immersed (unless concealed).
Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. In such a case, allow the kettle to cool before filling with cold water and reusing it.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- When using the kettle, it must be on a stable, secure, dry and level surface, out of children's reach, to prevent damage or injury from the kettle overturning.
- DO NOT operate the kettle under the following conditions:
 - * In a damp place or in areas with high humidity (such as in a bathroom)
 - * On or near a hot cooktop, in a heated oven, or near an open flame.
 - * On a metal tray.
 - * In confined spaces or under overhanging furniture/structures.
- Lift the kettle off the power base to fill it. Never fill the kettle while it sits on its base or while it is switched on to avoid spillage on the connector. If the power base unit becomes wet, unplug it before wiping it dry.

GENERAL SAFETY (Cont.)

- Do not overfill the kettle to avoid splattering and ejection of boiling water. Make sure the water level is between the minimum and maximum levels.
- Position the kettle so the spout is directed away from you.
- Before switching on, make sure the kettle is located properly on the power base and the lid is securely closed, otherwise it may not switch off.
- Do not leave the kettle unattended when the power is turned on.
- Ensure the kettle is switched off before removing it from the base. Do not move the appliance while it is switched on.
- Always unplug the kettle from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- CAUTION: Unplug the kettle and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

GENERAL SAFETY (Cont.)

CAUTION: HOT!

- Do not touch any part of the kettle housing when it is in use. The surfaces get hot. Only touch the handle. Do not put any part of your hand or body near the kettle when it is turned on.
- Take care when handling the kettle after use. The inside surface which conceals the heating element is subject to residual heat after use. Water can also remain hot for a considerable time after boiling and can present a scald hazard.
- **WARNING:** Do not remove the lid while the water is boiling. Keep the lid closed while the water is boiling and straight afterwards. Scalding may occur if the lid is removed while the water is heating up. Be careful when opening the lid for refilling when the kettle is hot.
- While water is boiling, or just after the water has finished boiling, avoid contact with the steam from the spout.
- Use extreme caution when moving the kettle containing hot water. Always take care when pouring hot water. Tilt the kettle slowly and carefully without tipping it too fast.

GENERAL SAFETY (Cont.)

ELECTRICAL SAFETY AND POWER CORD HANDLING

- Before connecting the kettle to the power supply, make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the kettle.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the kettle itself in water or other liquid. Do not expose the electrical connections to water.
- Only use the kettle with the power base provided. Do not use the power base to power any appliance other than this kettle.
- Avoid spillage on the connector.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. Do not let it touch hot surfaces. The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently.
- Do not use an extension cord with this kettle.
- Do not pick up or operate the appliance if the power supply cord, plug, power base or kettle housing is damaged, or after it malfunctions or has been damaged in any manner.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. In case of damage, contact our after sales support centre for advice.

This appliances is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

The appliance must not be immersed.

if the kettle is overfilled, boiling water maybe ejected.

CAUTION: Do not operate the kettle on an inclined plane, Do not operate the kettle unless the element is fully immersed

PRODUCT OVERVIEW



INSTALLATION

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. This product has been packaged to protect itself against transportation.
- Be sure to remove all packaging materials around the appliance and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

BOIL-DR PROTECTION

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

OPERATION

1. Place the kettle on the flat surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing down lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the switch and the indicator will light up, and then the kettle starts to boil the water. The kettle will switch off automatically once the water has boiled. If necessary, it will take you 30 seconds to wait before pressing the switch again to re-boil the water. You may shut off the power by lifting switch up or directly lift the kettle from the power base at any moment to stop boiling process.

NOTE: Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening.

5. Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not use.

CLEANING & MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter by pressing down the tab of filter inside the kettle and then replace it after cleaning.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

4. When not use or storage, the power cord may be wind under the bottom of kettle.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water to the maximum position, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushes away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

SPECIFICATIONS

Rating	220-240V - 50-60Hz, 1850-2000W
Dimensions	233 (W) × 161 (D) × 254 (H) mm

SUPPORT: info@ayonz.com

DISTRIBUTOR: Ayonz Pty Ltd