

# SEIKI

## HAND MIXER

SC5SHM



# INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

---

General Safety	4
Product Overview	9
Installation	10
Fixing the Bracket for Accessories	10
Operation	11
Cleaning & Maintenance	Last Page
Specifications	Last Page
Customer Helpline	Last Page

---

# GENERAL SAFETY

## IMPORTANT INFORMATION

Read this manual thoroughly before you start using the product.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 <b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

## IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

# GENERAL SAFETY (Cont.)

- This appliance is intended for private household use only.  
It is not intended for commercial/industrial or trade use. Do not use it outdoors.
- Do not use this hand mixer for anything other than its intended purpose, and only use it as described in this manual.  
Any other use is not recommended and may cause fire, electric shock or injury.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- DO NOT operate the hand mixer under the following conditions:
  - \* In a damp place or in areas with high humidity (such as in a bathroom)
  - \* On or near a hot cooktop, in a heated oven, or near an open flame.
  - \* On a metal tray.
  - \* In confined spaces or under overhanging furniture/structures.
- The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.

# GENERAL SAFETY (Cont.)

- Do not leave the hand mixer unattended when the power is turned on.
- Ensure the hand mixer is switched off before removing it from the base.  
Do not move the appliance while it is switched on.
- Always unplug the hand mixer from the outlet when it is not in use.  
To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the hand mixer and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.
  
- Do not put any part of your hand or body near the hand mixer when it is turned on.
- Take care when handling the hand mixer during use.
- Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
- Always disconnect the product from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not let cord hang over edge of table or hot surface.
- Do not immerse upper part of hand mixer into water as this would give rise to electric shock.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Avoid contacting moving parts.
- The use of accessory not recommended by the manufacturer may cause

## GENERAL SAFETY (Cont.)

injuries to persons.

- Do not operate the appliance for other than its intended use.
- Children should be supervised to ensure that they do not play with the appliance.
- Save these instructions.
- The use of accessory not recommended by the manufacturer may cause injuries to persons.
- Be sure to switch off the appliance after each use of your hand mixer. Make sure the motor stops completely before disassembling.
- Be care of potential injury from misuse.

# GENERAL SAFETY (Cont.)

## **ELECTRICAL SAFETY AND POWER CORD HANDLING**


- Before connecting the hand mixer to the power supply, make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the hand mixer.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the hand mixer itself in water or other liquid. Do not expose the electrical connections to water.
- Avoid spillage on the connector.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently.
- Do not use an extension cord with this hand mixer.
- Do not pick up or operate the appliance if the power supply cord, plug, hand mixer housing is damaged, or after it malfunctions or has been damaged in any manner.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. In case of damage, contact our after sales support centre for advice.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

The appliance must not be immersed.

# PRODUCT OVERVIEW

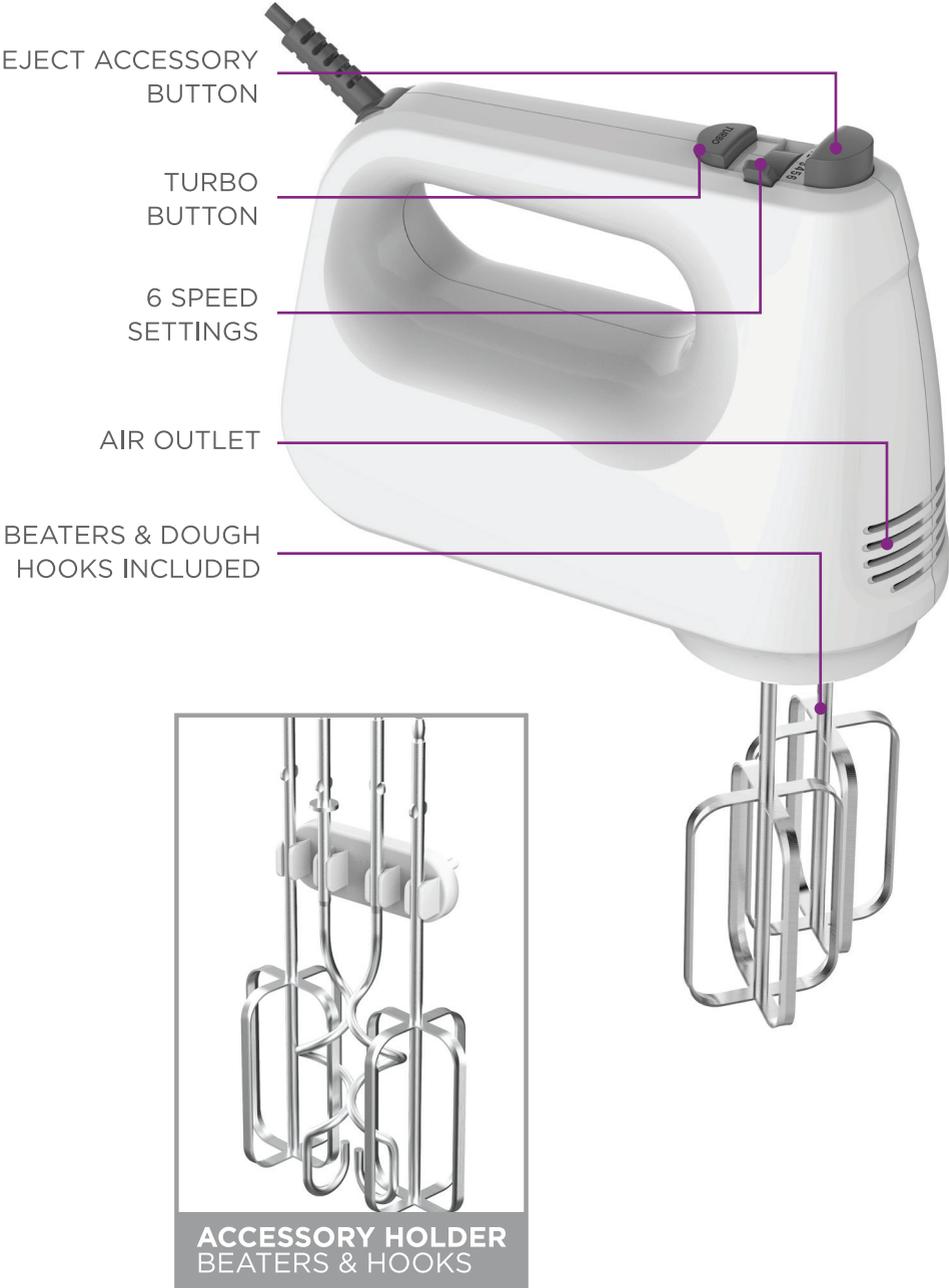

# INSTALLATION


Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

## UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. This product has been packaging to protect itself against transportation.
- Be sure to remove all packaging materials around the appliance and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

## INSTRUCTION OF THE FIXING BRACKET

There is a fixing bracket for storing beaters and dough hooks. After using, you can fix the beaters and dough hooks into bracket, then insert the bracket into the main unit.

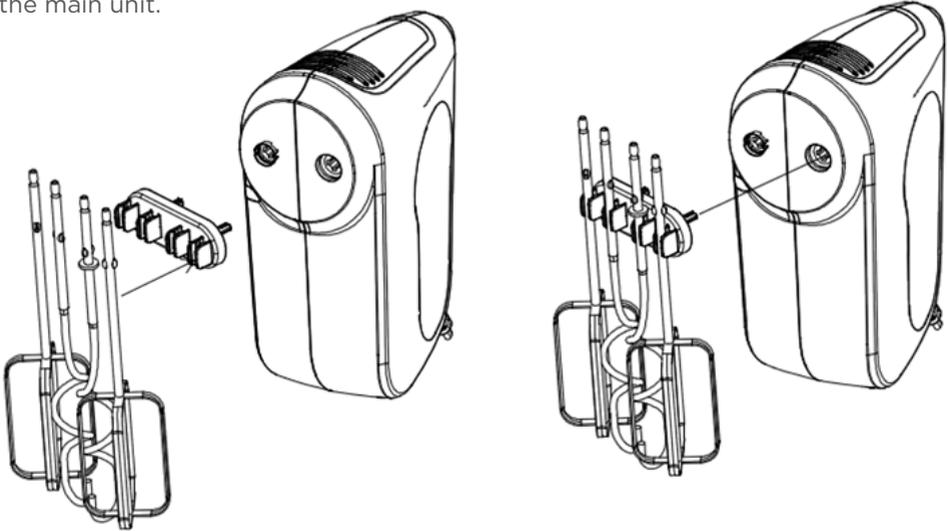

# OPERATION

## USING YOUR HAND MIXER

Before the first use, clean the HAND MIXER.

1. Assemble proper wire beaters or dough hooks into mixer.

**NOTE:** Wire beaters can be inserted in either socket, as the wire beaters are identical. For dough hooks, the one with washer can only be inserted into the bigger socket and the other one can only be inserted into smaller one. The two dough hooks can not be inserted in reverse.

2. Ensure that the unit is at the “0” setting, then plug in the power source.
3. Set the speed selector to your desired speed. There are 6 speed settings to be selected. When kneading yeast dough, suggesting to select the speed selector by lower speed and then by higher speed to achieve the best results. The mixer will run at the highest speed when pressing turbo button.

**WARNING:** Do not stick knife, metal spoons, fork and so on into bowl while operating.

4. Minimum 20 minutes rest time must be maintained between continuous two cycles.

**NOTE:** During operation you may rotate the bowl with hand to achieve the best results.

5. When mixing is complete, turn the speed selector to “0” setting, and unplug the cord from power outlet.
6. If necessary, scraping the excess food particles from the wire beaters or dough hooks by rubber or wooden spatula.
7. Hold the wire beaters or dough hooks with one hand and press the Ejector button firmly down with the other hand to remove the beater or dough hooks.

**NOTE:**

- 1). Remove the wire beaters or dough hooks only the speed selector at the “0” setting.
- 2). During operation, you can put the mixer vertically, but make sure the speed selector is at the “0” setting.

# CLEANING & MAINTENANCE

1. Unplug the appliance and wait it completely cool down before clean.
2. Wipe over the outside surface of the head with a damp cloth and polish with a soft dry cloth.
3. Wipe any excess food particles from the power cord.
4. Wash the wire beaters and dough hooks in warm soapy water and wipe them with a dry cloth. The wire beaters and dough hooks may be washed in the dishwasher.

**CAUTION:** The mixer can not be immersed into water or other liquid.

**WARNING:** Any other serving should be performed by an authorized service representative.

## SPECIFICATIONS

<b>Rating</b>	220-240V ~ 50Hz, 250W
<b>Dimensions</b>	80 (W) × 180 (D) × 189 (H) mm

# SEIKI

**SUPPORT:** [info@ayonz.com](mailto:info@ayonz.com)

**DISTRIBUTOR:** Ayonz Pty Ltd